



ISOFLUXTM

The ultrasonic meter

USER MANUAL



IFX-F100

Ultrasonic clamp-on Flow Transmitter



Flow_Transmitter_IFX-F100_EN_2017_March_Rev.00

ISOIL
INDUSTRIA

IFX-F100

Operating Instructions

Index

	Page
1 Safety instructions	4
1.1 Symbols used in these operating instructions	4
1.2 Safety instructions	5
2 Introduction	6
2.1 How to order	7
3 Installation	8
3.1 Unpacking and storage	8
3.1.1 Unpacking	8
3.1.2 Storage	8
3.1.3 Identification of components	8
3.2 Clamp-on sensor installation	9
3.3 Installation location	10
3.4 Pipe preparation	12
3.5 Clamp-on sensor mounting configurations and distance	12
3.6 Flowmeter installation	14
3.6.1 Outline dimensions	14
3.6.2 Electrical connections	15
3.7 Clamp-on sensor mounting	16
3.7.1 Sensor pipe mounting configurations	17
3.7.2 Acoustic coupling gel	17
3.7.3 Correct positioning of the sensors	17
3.7.4 Sensor mounting with tension straps	18
4 Operation	19
4.1 Switching On/Off	19
4.2 Keypad and display	19
4.2.1 Keypad key functions (internal keypad)	19
4.2.2 Display functions	20
4.3 Quick setup wizard	21
4.4 Measurements	24
4.4.1 Main process value (PV) display	24
4.4.2 Diagnostic displays	25
4.4.3 Totalisers	25

4.4.4	Datalogger	25
5	Commissioning	25
5.1	Menu structure	25
5.2	Diagnostics	31
5.3	Display settings	31
5.3.1	Main PV	31
5.4	Output settings.....	31
5.4.1	Serial interface RS 232.....	31
5.4.2	Serial interface RS 485 / Modbus RTU.....	31
5.4.3	HART compatible output	32
5.4.4	Analogue current output 0/4 ... 20 mA.....	32
5.4.5	Analogue voltage output 0 – 10 v	33
5.4.6	Analogue frequency output (passive).....	33
5.4.7	Digital open collector output.....	33
5.4.8	Digital relay output	34
5.5	Input configuration	34
5.5.1	PT100 inputs	34
5.5.2	Analogue current input 0/4 ... 20 mA.....	34
5.5.3	Heat quantity measurement (HQM) – [where installed].....	35
5.6	Sound velocity measurement (SVM)	35
5.7	Scope function (where provided)	35
6	Maintenance.....	36
6.1	Service/Repair	36
7	Troubleshooting.....	36
7.1	Data download difficulties.....	38
8	Technical data	39
9	Specification.....	45
10	CE Declaration of Conformity	47

1 Safety instructions

1.1 Symbols used in these operating instructions



Danger

This symbol represents an immediate hazardous situation which could result in a serious **injury, death** or **damage to the equipment**. Where this symbol is shown, do not use the equipment further unless you have fully understood the nature of the hazard and have taken the required precautions.



Attention

This symbol indicates important instructions which should be respected in order to avoid damaging or destroying the equipment. Follow the precautions given in these instructions to avoid the hazard. Call our service team if necessary.



Call service

Where this symbol is shown call our service team for advice if necessary.



Note

This symbol indicates a note or detailed set-up tip.



Information point.



Operator keys are printed in bold typeface and placed in pointed brackets.

1.2 Safety instructions

- Do not install, operate or maintain this flowmeter without reading, understanding and following these operating instructions, otherwise injury or damage may result.
- Study these operating instructions carefully before the installation of the equipment and keep them for future reference.
- Observe all warnings, notes and instructions as marked on the packaging, on the equipment, and detailed in the operating instructions.
- Do not use the instrument under wet conditions with the battery cover removed or opened.
- Follow the unpacking, storage and preservation instructions to avoid damage to the equipment.
- Install the equipment and cabling securely and safely according to the relevant regulations.
- If the product does not operate normally, please refer to the service and troubleshooting instructions, or contact Isoil Industria for help.

2 Introduction

Clamp-on transit-time flowmeter

The IFX-F100 is a hand-held, battery operated ultrasonic flowmeter employing clamp-on sensors for the measurement of liquids in full, enclosed pipes. Flow measurements can be undertaken without interruption of the process or interference with the integrity of the pipeline. The clamp-on sensors are attached to the outside of the pipes. The IFX-F100 uses ultrasonic signals for measurement of the flow, employing the transit-time method.

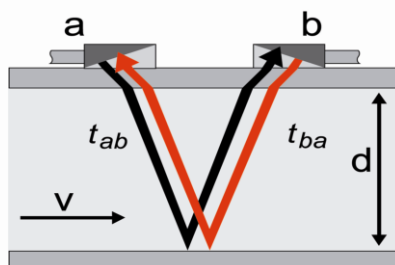


Illustration 1: Clamp-on ultrasonic sensor configuration

Measuring principle

Ultrasonic signals are emitted by a transducer installed on a pipe and received by a second transducer. These signals are emitted alternately in the direction of flow and against it. Because the medium is flowing, the transit time of the sound signals propagating in the direction of flow is shorter than the transit time of the signal propagating against the direction of flow. The transit-time difference ΔT is measured and allows the determination of the average flow velocity along the path of acoustic propagation. A profile correction is then performed to obtain the average flow velocity over the cross-sectional area of the pipe, which is proportional to the volumetric flow rate.

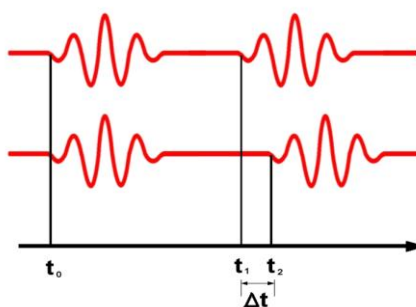



Illustration 2: Transit-time measuring principle

2.1 How to order

<div>  </div>	
Model code	Description
IFX-F100- Fixed Installation Flow meter Power supply	
1	Ultrasonic flow transmitter IFX-F100, 100 ... 240 V AC, 50/60 Hz, serial interface RS 232, with LCD graphic display, 128 x 64 dots, backlit with keypad
2	Ultrasonic flow transmitter IFX-F100, 9 ... 36 V DC, serial interface RS 232, with LCD graphic display, 128 x 64 dots, backlit with keypad
I/O Modular cards for IFX-F100 (max 5 selectable if RS485, Modbus or Hart are not used)	
A	IOMOD_Current output board active, 0/4 ... 20 mA
B	IOMOD_Current output board passive, 0/4 ... 20 mA
C	IOMOD_Voltage output board 0 ... 10 V
D	IOMOD_Relay output board
E	IOMOD_Open-Collector output board - Pulse
F	IOMOD_Frequency output board, 0 ... 10 kHz
G	IOMOD_Modbus RTU protocol output board (if selected cannot be used with any other output)
H	IOMOD_RS485 output chip fitted (if selected cannot be used with any other output)
I	IOMOD_HART compatible output board, 4 ... 20 mA (if selected cannot be used with any other output)
L	IOMOD_PT100 input board including Energy calculation enabling (compatible with HART, Modbus or RS485)
M	IOMOD_Current input board active, 0/4 ... 20 mA
Clamp-on sensors for IFX-F100	
1	Clamp-on ultrasonic transducer pair type K1L, -30 ... 80 °C, direct sensor connection, cable length 5 m. DN50 to DN3000
2	Clamp-on ultrasonic transducer pair type K1L, -30 ... 80 °C, direct sensor connection, cable length 10 m. DN50 to DN3000
3	Clamp-on ultrasonic transducer pair type K1L, -30 ... 80 °C, direct sensor connection, cable length 30 m. DN50 to DN3000
4	Clamp-on ultrasonic transducer pair type K1P, -20 ... 60 °C, direct sensor connection, cable length 10 m. DN50 to DN3000
5	Clamp-on ultrasonic transducer pair type K1E, -30 ... 250 °C, direct sensor connection cable length 4 m. DN50 to DN3000
6	Clamp-on ultrasonic transducer pair type K4L, -30 ... 80 °C, direct sensor connection, cable length 5 m. DN10 to DN250
7	Clamp-on ultrasonic transducer pair type K4L, -30 ... 80 °C, direct sensor connection, cable length 10 m. DN10 to DN250
8	Clamp-on ultrasonic transducer pair type K4E, -30 ... 250 °C, direct sensor connection, cable length 2,5 m. DN10 to DN250
9	Clamp-on ultrasonic transducer pair type K1N, -30 ... 130 °C, direct sensor connection, cable length 4 m. DN50 to DN3000
10	Clamp-on ultrasonic transducer pair type K4N, -30 ... 130 °C, direct sensor connection, cable length 2,5 m. DN10 to DN250
Temperature sensor - Requires Pt100 Input Board	
A	Without
B	PT100 clamp-on sensor, 0 ... 250 °C, 4-wire, accuracy class A, 3 m cable length, terminated wires, (pair)
Mounting Accessories	
1	Without
2	Metallic Tension strap 2x0,5 m length, with clamping clips suitable for pipe up to 100mm diameter
3	Metallic Tension strap 2x2 m length, with clamping clips suitable for pipe up to 600 mm diameter - Consult with Isoil for bigger pipes
4	Magnetic mounting arrangement for K1 sensors, ruler and mounting clamps allow quick and easy installation, 2 m chain included for non-magnetic pipes
5	Magnetic mounting arrangement for K4 sensors, ruler and mounting clamps allow quick and easy installation, 1 m chain included for non-magnetic pipes
Accessories - Spares	
A	Without
B	Acoustical paste Pack of 100 ml Suitable for temperature -30 +130 °C
C	Acoustical paste Pack of 100 ml Suitable for temperature -30 +250 °C
D	RS232/USB Adaptor cable with IFX interface Software
E	Junction box for L type sensors (wired sensor connection)
F-01	Extension cable for sensors pair (dual coaxial) price for one meter - Junction box is required
Example of order: Fixed flow meter 220 VAC with 4-20mA output, K1L ultrasonic sensors 5m cable, without temp. sensor, without mounting acc. with acoustical paste IFX-F100-1A1A1B	

3 Installation

3.1 Unpacking and storage

3.1.1 Unpacking

Care should be taken when opening the box containing the flowmeter, any markings or warnings shown on the packaging should be observed prior to opening. The following steps should then be taken:

- Unpack the flowmeter in a dry area;
- The flowmeter should be handled with care and not left in an area where it could be subject to physical shocks;
- If using a knife to remove packaging care should be taken not to damage the flowmeter or cables;
- The flowmeter package and contents should be checked against the delivery note supplied and any missing items reported immediately;
- The flowmeter package and contents should be checked for signs of damage during transport and any problems reported immediately;
- The vendor accepts no responsibility for damage or injury caused during the unpacking of the instrumentation supplied;
- Excess packing materials should be either recycled or disposed of in a suitable way.

3.1.2 Storage

If storage is necessary, the flowmeter and sensors should be stored:

- in a secure location;
- away from water and harsh environmental conditions;
- in such a way, as to avoid damage;
- small items should be kept together in the bags and small plastic boxes provided to avoid loss.

3.1.3 Identification of components

The following items are typically supplied (please refer to your delivery note for a detailed description):

- IFX-F100 ultrasonic flow transmitter
- Clamp-on sensors (usually one or two pairs depending on pipe sizes to be measured)
- Sensor connection cable(s) if not direct sensor connection
- Sensor mounting accessories
- Coupling component (optional)
- Operation instructions

3.2 Clamp-on sensor installation

The correct selection of the sensor location is crucial for achieving reliable measurements and a high accuracy. Measurement must take place on a pipe in which sound can propagate (see Acoustic Propagation) and in which a rotationally symmetrical flow profile is fully developed (see Straight Pipe Lengths).

The correct positioning of the transducers is an essential condition for error-free measurements. It guarantees that the sound signal will be received under optimal conditions and evaluated correctly. Because of the variety of applications and the different factors influencing the measurement, there can be no standard solution for the positioning of the transducers.

The correct position of the transducers will be influenced by the following factors:

- diameter, material, lining, wall thickness and general condition of the pipe;
- the medium flowing in the pipe;
- and the presence of gas bubbles and solid particles in the medium.

Check that the temperature at the selected location is within the operating temperature range of the transducers (see technical specification in the Appendix).

After the sensor location, has been selected, make sure that that supplied cable is long enough to reach the flow transmitter mounting location. Ensure that the temperature at the selected location is within the ambient operating temperature range of the flow transmitter (see Specification)

Acoustic propagation Acoustic propagation is given when the flowmeter is able to receive sufficient signal from the transmitted ultrasonic pulses. The signals are attenuated in the pipe material, the medium and at each of the interfaces and reflections. External and internal pipe corrosion, solid particles and gas content in the medium do heavily contribute to signal attenuation.

Straight pipe lengths Sufficient straight lengths of pipe on the inlet and outlet of the measuring location guarantee an axi-symmetrical flow profile in the pipe for good measurement accuracy. If insufficient straight lengths of pipe are available for your application measurements are still obtainable, but the certainty of the measurement can be reduced.

3.3 Installation location


Select an installation location following the recommendations in Table 1 and try to avoid measuring:



- in the vicinity of deformations and defects of the pipe,
- near welding seams,
- where deposits could be building up in the pipe.





For a horizontal pipe:

Select a location where the transducers can be mounted on the side of the pipe, so that the sound waves emitted by the transducers propagate horizontally in the pipe. In this way, the solid particles deposited on the bottom of the pipe and the gas pockets developing at the top will not influence the propagation of the signal.

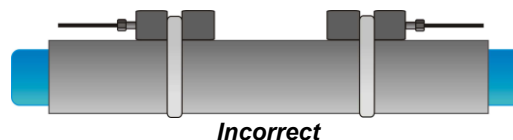

For a free inlet or outlet pipe section:

Select the measuring point at a location where the pipe cannot run empty.

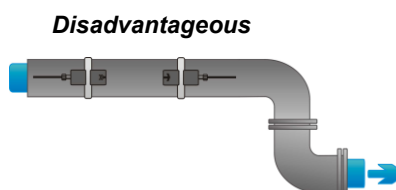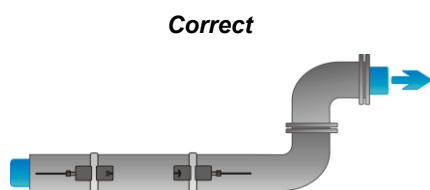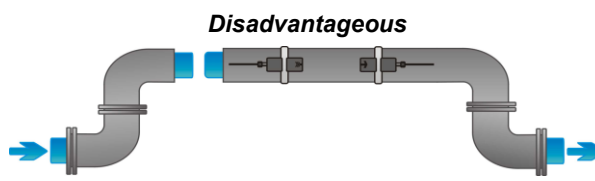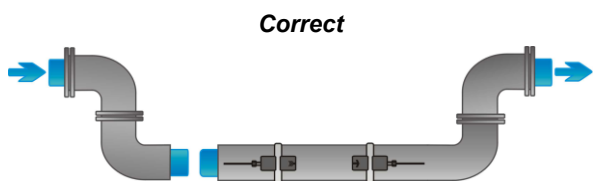

For a vertical pipe:

Select the measuring point at a location where the liquid flows upward to ensure that the pipe is completely filled.


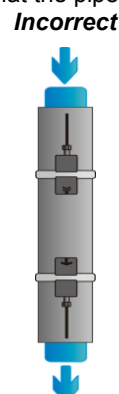



Table 1: Recommendations for sensor mounting location




Look for a sensor installation location with sufficient straight pipe to obtain accurate measurements. Please refer to Table 2 as a guideline for recommended distances from disturbance sources.

Disturbance source: 90°-elbow


Inlet

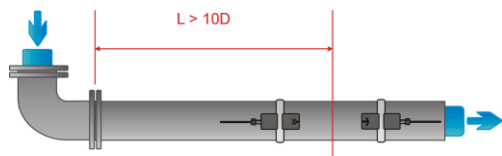 $L \geq 10 D$ 


Outlet

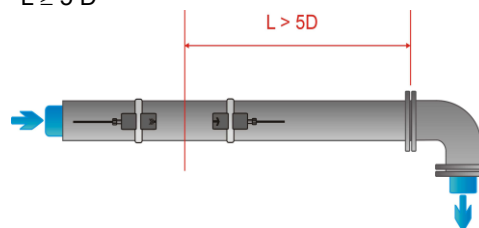 $L \geq 5 D$ **Disturbance source: 2 x 90°-elbows in one plane**


Inlet

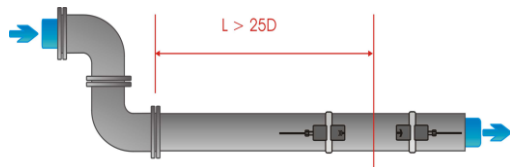 $L \geq 25 D$ 


Outlet

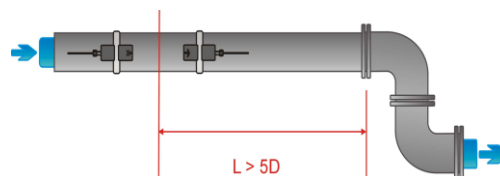 $L \geq 5 D$ **Disturbance source: 2 x 90°-elbows in different planes**


Inlet

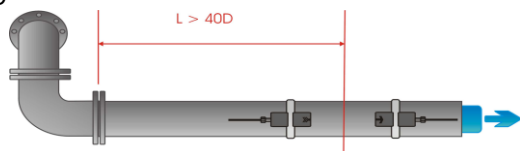 $L \geq 40 D$ 


Outlet

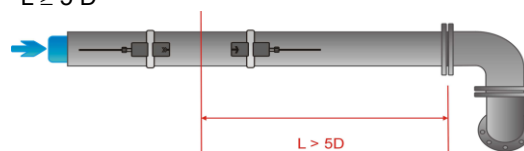 $L \geq 5 D$ **Disturbance source: T-section**


Inlet

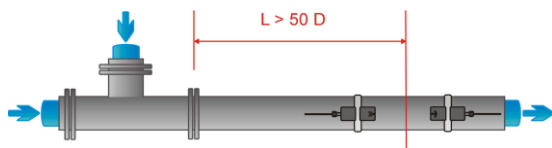 $L \geq 50 D$ 


Outlet

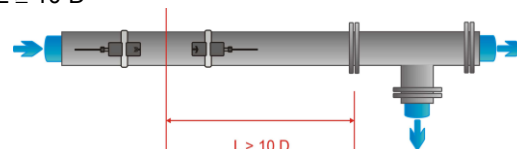 $L \geq 10 D$ **Disturbance source: diffuser**


Inlet

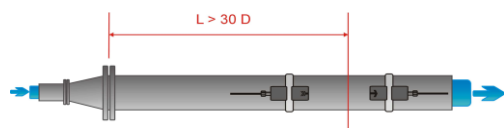 $L \geq 30 D$ 


Outlet

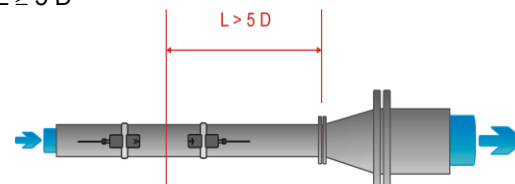 $L \geq 5 D$ **Disturbance source: reducer**

Inlet

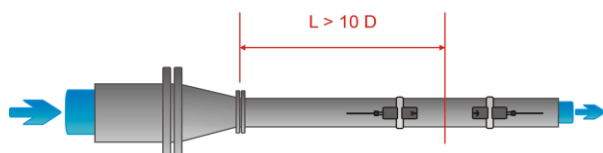 $L \geq 10 D$ 

Outlet

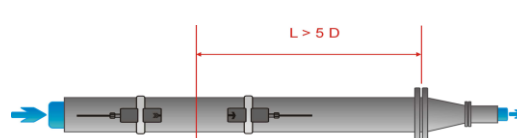 $L \geq 5 D$ 

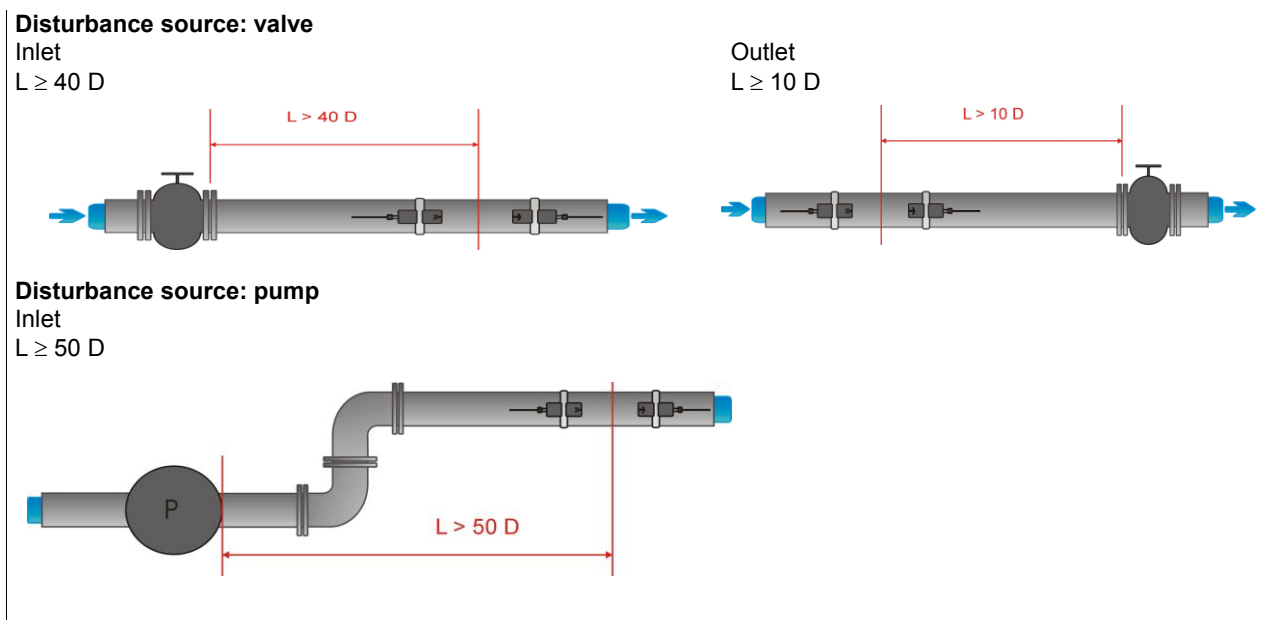


Table 2: Recommended distances from disturbance sources

3.4 Pipe preparation

- Clean dirt and dust from around the area of the pipework where the sensors are to be placed;
- Remove loose paint and rust with a wire brush or file.



Firmly bonded paint does not necessarily need to be removed provided the flowmeter diagnostics indicate sufficient signal strength.

3.5 Clamp-on sensor mounting configurations and distance

Reflection Mode

The most common clamp-on sensor mounting configuration is the Reflection Mode, sometimes known as V-Mode (see Illustration 3, sketch (1)). Here, the ultrasonic signal passes twice through the medium (2 signal passes). The Reflection Mode is the most convenient mounting method as the transducer separation distance can be measured easily and the sensors can be accurately aligned. This method should be used whenever possible.

Diagonal Mode

An alternative mounting configuration (Illustration 3, sketch (3)) is the Diagonal mode (Z-Mode). The signals travel only once through the pipe. This method is often used for larger pipes where greater signal attenuation might occur.

Further variation of the Reflection and the Diagonal Modes are possible by altering the number of passes through the pipe. Any even number of passes will require mounting the sensors on the same side of the pipe, while with an odd number of passes, the sensors must be mounted on opposite sides of the pipe. Commonly, for very small pipes, sensor mounting configurations such as 4 passes (W-mode) or 3 passes (N-mode) are used (Illustration 3, sketch (2)).

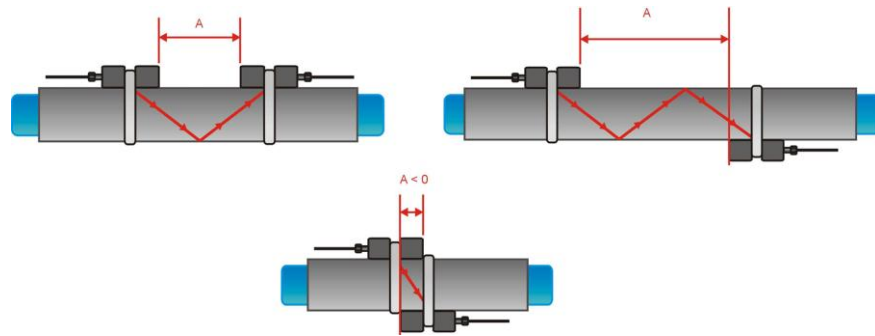


Illustration 3: Clamp-on sensor mounting configurations and sensor spacing

**Transducer
separation distance**

The transducer separation distance A is measured from the inside edges of the sensor heads as shown in illustration 3. It is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.


A negative separation distance $A < 0$ can occur for mounting configurations on small pipes where diagonal mode operation has been selected (see Illustration 3, sketch (3)). Negative separation distances may be suggested for reflection mode installations, but are not possible. In these cases, use diagonal mode or a larger number of passes.

3.6 Flowmeter installation


3.6.1 Outline dimensions

The IFX-F100 is a wall mounted device and can be installed using suitable screws and wall plugs according to the following drawings.


Flowmeter outline dimensions

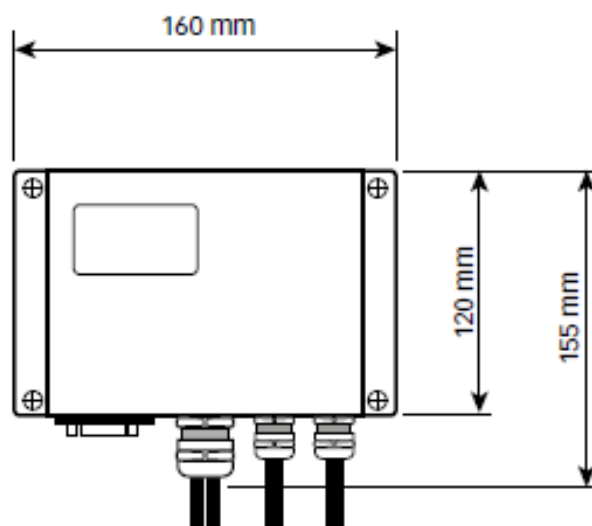

Drilling aid for all mounting

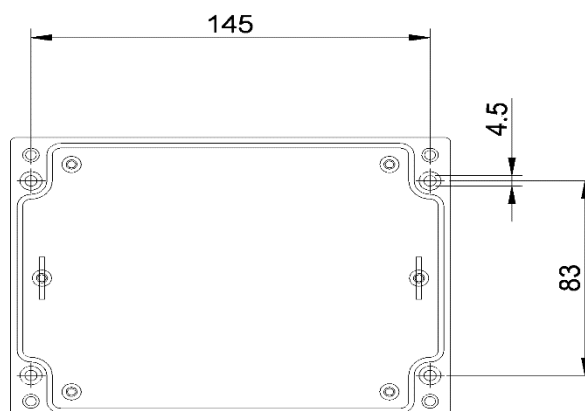

Make sure that the ambient temperature is within the -10 ... 60 °C operating temperature range specified for the flowmeter unit.

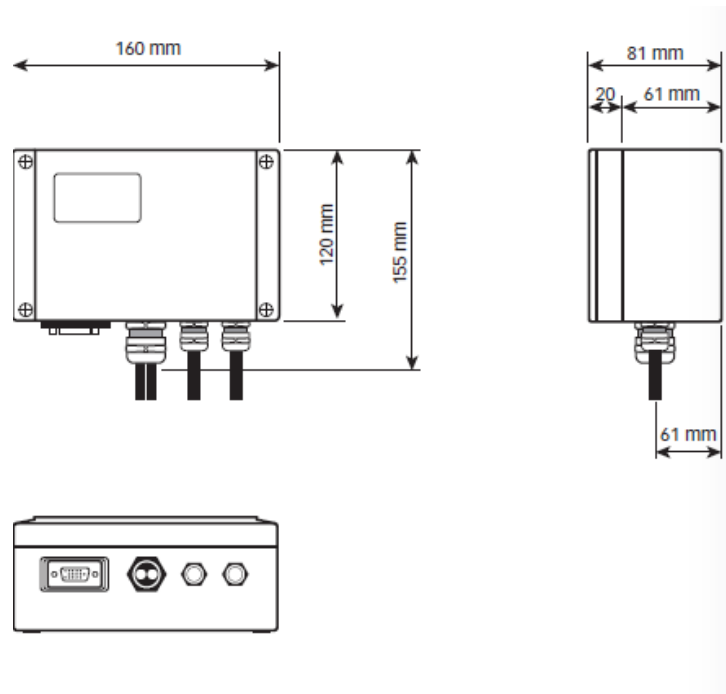


3.6.2 Electrical connections

Electrical wiring

Please note that in order to supply the unit with MAINS POWER, the equipment must be protected by suitably sized switches and circuit breakers.

100 ... 240 V AC, 50/60 Hz	10 W
9 ... 36 V DC	10 W

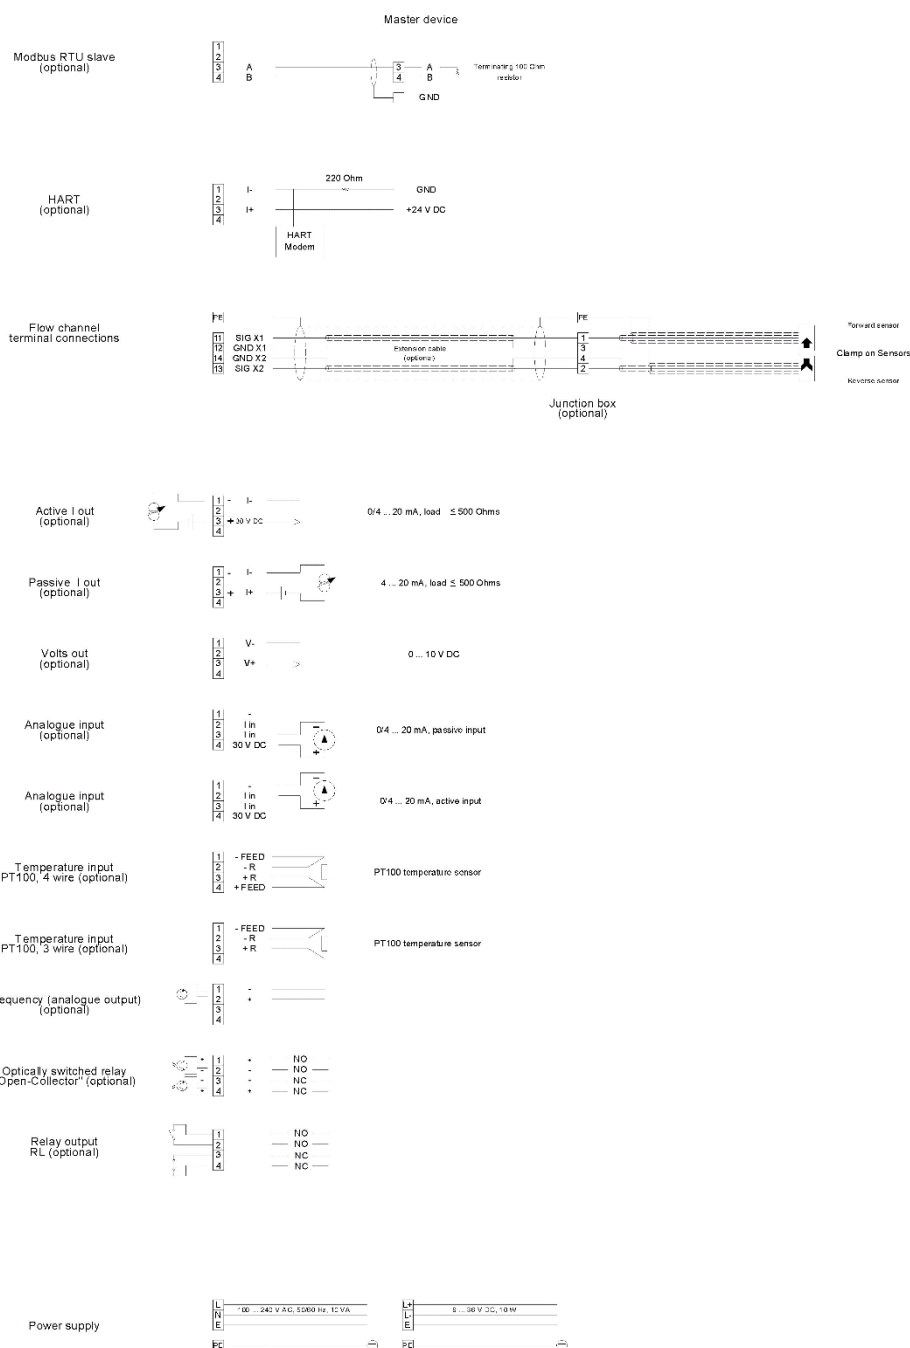

3.7 Clamp-on sensor mounting

Sensor mounting

Before the sensors can be mounted

- the installation location should have been determined,
- a sensor mounting method should be chosen,
- the flowmeter must be mechanically and electrically installed,
- the sensors must be connected to the flowmeter.

Depending on which sensor mounting method is being used, the clamp on sensors are either mounted on the same side of the pipe (Reflection Mode)

or on opposite sides of the pipe (Diagonal Mode). The sensor spacing is calculated by the flowmeter from the pipe parameters entered.

3.7.1 Sensor pipe mounting configurations

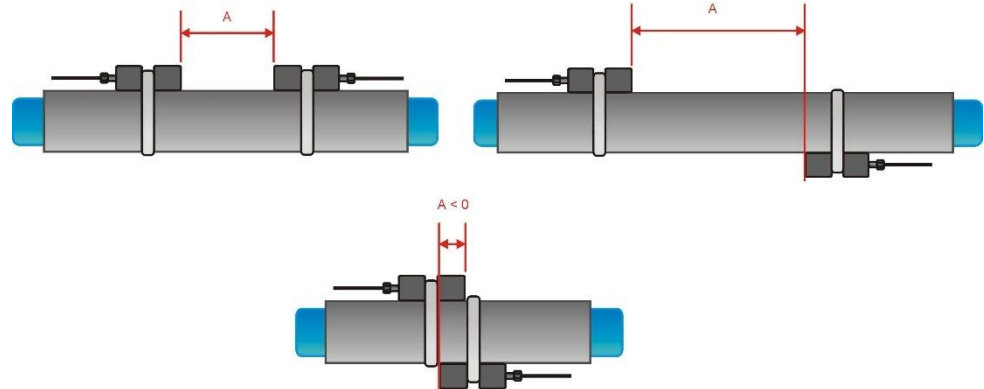


Illustration 4: Sensor pipe mounting configurations

3.7.2 Acoustic coupling gel



In order to obtain acoustical contact between the pipe and the sensors, apply a bead of acoustic coupling gel lengthwise down the centre of the contact area of the sensors.

3.7.3 Correct positioning of the sensors

Correct sensor position



Illustration 5: Correct positioning of the sensors

Always mount the transducer pair so that the free front edges of the sensors face each other.

There is a different engraving on the top of each transducer. The transducers are mounted correctly if the engravings on the two transducers form an arrow. The transducer cables should point in opposite directions.



Later, the arrow, in conjunction with the indicated measured value, will help to determine the direction of flow.

The sensor separation distance is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.

3.7.4 Sensor mounting with tension straps



Illustration 6: Metallic mounting straps

- Cut the tension straps to the appropriate length.
- Pull at least 2 cm of the tension strap through the slot in the clamp and bend the strap back to secure the clamp to the tension strap.
- Guide the other end of the tension strap through the groove on top of the sensor.



Illustration 7: Sensor mounting with tension straps and clamps

- Place the sensor onto the prepared pipe section.
- Hold the clamp on the transducer with one hand and guide the tension strap around the pipe.
- Pull the tension strap and guide the free end through the clamp so that the clamp hooks engage. Slightly tighten the screw on the clamp.
- Mount the second sensor in the same way.
- Press the sensors firmly to the pipe. There should be no air pockets between the transducer surface and the pipe wall.
- Using a measuring tape, adjust the sensor separation distance as suggested by the flowmeter. When the sensor positioning screen is displayed, the middle bar allows fine adjustment of the sensor location.

- Ensure that the narrower side of the clip is above and inside the wider side and that the two sides of the clip do not come into contact while tightening, as this will prevent the strap from being correctly tensioned.



Illustration 8: Clip arrangement for correct tensioning

4 Operation

4.1 Switching On/Off

The flowmeter is switched on by connecting the power supply to the instrument. Disconnecting the external supply switches off the flowmeter.

4.2 Keypad and display

The internal batteries can be recharged with the external battery charger supplied.




4.2.1 Keypad key functions (internal keypad)

Key	Main function	Secondary function(s)
Right Arrow	Character position selection for data entry. Move RIGHT .	Screen selection in measurement mode
Down Arrow	Move menu/list selection item DOWN	Character entry from scrolled characters, move in scrolled lists screen selection in measurement mode







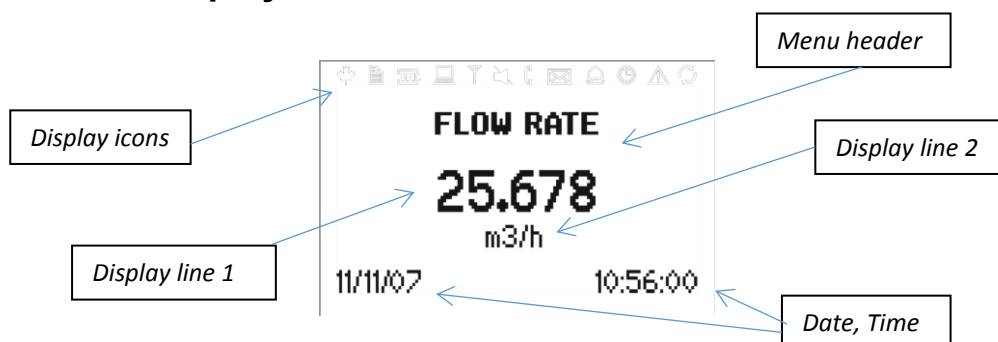



ALT	Backlight on/off	
ESC	ESC ape menu item	Abort entry without saving, escape measurement mode
ENT	ENT er menu item	Confirm entry with saving or move through menu structure



Table 3: Keyboard function

4.2.2 Display functions



Display icons

Display icon	Function
	On Icon not used Off Icon not used
	On Datalogger recording Off Datalogger switched off
	On Not used Off Not used
	On LCD backlight switched on Off LCD backlight switched off
	On I/O processor error Off I/O processor functioning correctly
	On Without strike-through: Speaker on Off with strike-through: Speaker off
	On Poor sensor coupling, low SNR Off Sensor coupling OK
	On Icon not used Off Icon not used
	On Icon not used Off Icon not used
	On RTC operating Off RTC failure



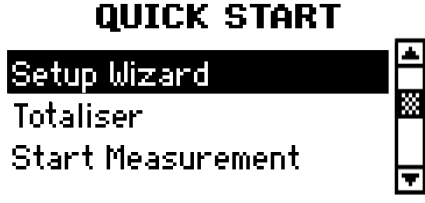

	On Error recorded in error log Off No error detected
	On Serial output switched on Off Serial output switched off
"L", "T" or "LT"	Displays whether flow is laminar, turbulent or mixed


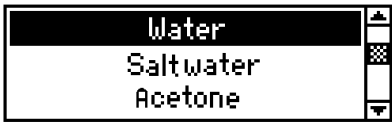


4.3 Quick setup wizard

Quick start wizard

The quick setup wizard allows for a speedy setup of the most important parameters in order to achieve successful measurements in the shortest possible time:

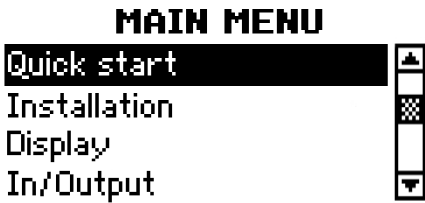Alternative specifications are shown in light grey

Display screen	Operation
	<p>The main menu is displayed after first power on and the boot-up sequence.</p> <p>Use <UP> and <DOWN> cursor keys to select Quick start. Confirm by pressing <ENTER>.</p>
	<p>Use cursor keys to select Setup Wizard. Confirm by pressing <ENTER>.</p> <p>If sensors are recognised, the serial number will be shown. If not recognised or not connected, they may be selected from a list.</p>
	<p>Use cursor keys to select Setup Wizard. Confirm by pressing <ENTER>.</p> <p>If sensors are recognised, the serial number will be shown. If not recognised or not connected, they may be selected from a list.</p>
	<p>Select units of measurement using cursor keys and pressing <ENTER>.</p>

<p>PIPE MATERIAL</p> 	<p>Choose pipe material using cursor keys and pressing <ENTER>.</p>														
<p>OUTSIDE DIAMETER</p> <p>76.1 mm</p>	<p>Enter outside pipe diameter using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p> <p>If 0 is entered, an additional screen appears that allows entering the pipe circumference.</p>														
<p>WALL THICKNESS</p> <p>3.4 mm</p>	<p>Enter pipe wall thickness using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p>														
<p>FLUID</p> 	<p>Select fluid using cursor keys.</p> <p>Confirm by pressing <ENTER>.</p>														
<p>TEMPERATURE</p> <p>20.0 C</p>	<p>Enter process temperature using alphanumerical keys and confirm by pressing <ENTER>.</p> <p>Use key <UP> as character backspace clear to correct for data entry errors.</p>														
<p>LINER MATERIAL</p> 	<p>Select pipe lining material using cursor keys.</p> <p>Confirm by pressing <ENTER>.</p>														
<p>PASSES</p> 	<p>Select transducer configuration (number of passes) using cursor keys.</p> <table border="0"> <tr> <td>Auto</td> <td>Automatically</td> </tr> <tr> <td>1</td> <td>1 pass, diagonal mode</td> </tr> <tr> <td>2</td> <td>2 passes, reflection mode</td> </tr> <tr> <td>3</td> <td>3 passes, diagonal mode</td> </tr> <tr> <td>4</td> <td>4 passes, reflection mode</td> </tr> <tr> <td>5</td> <td>5 passes, diagonal mode</td> </tr> <tr> <td>6</td> <td>6 passes, reflection mode ..etc.</td> </tr> </table> <p>Confirm by pressing <ENTER>.</p>	Auto	Automatically	1	1 pass, diagonal mode	2	2 passes, reflection mode	3	3 passes, diagonal mode	4	4 passes, reflection mode	5	5 passes, diagonal mode	6	6 passes, reflection mode ..etc.
Auto	Automatically														
1	1 pass, diagonal mode														
2	2 passes, reflection mode														
3	3 passes, diagonal mode														
4	4 passes, reflection mode														
5	5 passes, diagonal mode														
6	6 passes, reflection mode ..etc.														






<p>QUICK START</p> <p>Read Flowmeter</p> <p>Write Flowmeter</p> <p>Sensor Positioning</p> <p>Start/Stop</p> 	<p>Use cursor keys to select Write Flowmeter. Confirm by pressing <ENTER>.</p> <p>The programmer will send setup parameters to the flowmeter.</p>
<p>QUICK START</p> <p>Read Flowmeter</p> <p>Write Flowmeter</p> <p>Sensor Positioning</p> <p>Start/Stop</p> 	<p>Use cursor keys to select Sensor Positioning. Confirm by pressing <ENTER>.</p>
<p>QUICK START</p> <p>Setup Wizard</p> <p>Totaliser</p> <p>Start Measurement</p> 	<p>Use cursor keys to select Start Measurement. Confirm by pressing <ENTER>.</p>
<p>CHNL1 SENSOR</p> <p>Spacing 110.5 mm</p> <p>Using 2 passes</p> <p>Signal 26 dB</p> 	<p>Sensor positioning screen: Mount transducers with suggested spacing and use middle bar for fine adjustment of position (central position is desired). Observe signal-to-noise (upper bar) and quality (lower bar). These should be of identical length.</p> <p>Confirm by pressing <ENTER> to obtain measurements (screen) or to return to menu (programmer).</p> <p>Note : Numbers shown are for indication only.</p>
<p>QUICK START</p> <p>Setup Wizard</p> <p>Read Flowmeter</p> <p>Write Flowmeter</p> <p>Start/Stop</p> 	<p>Use cursor keys to select Start/Stop. Confirm by pressing <ENTER>.</p> <p>Programmer will send the start command to the flowmeter. When complete, process outputs and local display (if fitted) will be active.</p> <p>Programmer screen will revert to this display.</p>
	<p>Success!</p>

Table 4: Quick Start wizard

4.4 Measurements

4.4.1 Main process value (PV) display

Measurement is started using the Quick Setup Wizard. Once all the parameters are programmed, any subsequent power-on sequences will bring up the main PV display immediately.

Display screen	Operation
<p style="text-align: center;">FLOW RATE</p> <p style="text-align: center;">25.678</p> <p style="text-align: center;">m³/h</p> <p>11/11/07 10:56:00</p>	<p>The main process value can be changed in the menu structure.</p> <p>Press <ESC> at any time to access the main menu.</p> <p>Change to other measurement and diagnostic screens by pressing the arrow keys (where fitted).</p>

3-line display format

Display screen	Operation
<p style="text-align: center;">CHNL-1</p> <p style="text-align: center;">- 0.0 m³</p> <p style="text-align: center;">25.678 m³/h</p> <p style="text-align: center;">1.370 m/s</p> <p>11/11/07 10:56:00</p>	<p>The three-line display screen is configurable to show flow, totalizers and diagnostic functions.</p> <p>Change to diagnostic displays by pressing <DISP> and to totalizer screens by pressing <NEXT>.</p> <p>Cycle through display screens using <NEXT>.</p>

4.4.2 Diagnostic displays

Diagnostic screens

Display screen	Operation
<p style="text-align: center;">DIAGNOSTIC 1</p> <p style="text-align: center;">55.2 Gain 20.5 Signal -10.0 Noise</p> <p>11/11/07 10:56:00</p>	<p>Line 1 shows the amplifier gain.</p> <p>Line 2 displays the signal strength.</p> <p>Line 3 indicates the noise.</p> <p>Change to more diagnostic displays by pressing <NEXT>.</p>

4.4.3 Totalisers

Totalisers

The totaliser displays will only be shown when the totalisers are activated.

Display screen	Operation
<p style="text-align: center;">TOTALISER -1</p> <p style="text-align: center;">- 0.0 m3 0.0 + - 0.0 -</p> <p>11/11/07 10:56:00</p>	<p>The flow totaliser can be started or reset by selecting "Totalizer" from the main menu.</p> <p>The totalizer can be viewed on the three line display as shown (where specified – not KF101), or by selecting a quantity as the middle unit.</p> <p>View the three line menu by pressing the "NEXT" button.</p>

4.4.4 Datalogger

The datalogger is enabled from the Main Menu, and operates when a non-zero value is entered for the interval.



Items to be logged are selected from the "Selection" screen. "ENTER" selects items, "0" deselects. Up to ten items may be selected.

(Note : If no items are selected the logger will record blank space)

Send logger by serial port to a terminal program by selecting "Log download".

Clear the logger by selecting "Log Erase".

Remaining logger space can be seen in the Diagnostic displays.

Logged data can be downloaded, viewed and exported using the Isoflux+ software except when "wrap" mode has been enabled.

5 Commissioning

5.1 Menu structure

Alternative specifications are shown in light grey

Menu structure

Main menu	Menu level 1	Menu level 2	Description/settings
Quick Start			
	Setup Wizard		
		Sensor type	Indication of sensor type and serial number if automatically detected, otherwise select from list ↑↓ K1N,K1L,K1E,K1Ex,K1P,

			K4N,K4L,K4E,K4Ex,K4P, K0, M, Q, Special
		Middle (main displayed) Units	<i>Select from list where available</i> ↑↓ m/s, f/s, in/s, m ³ /h, m ³ /min, m ³ /s, l/h, l/min, l/s, USgal/h, USgal/min, USgal/s, bbl/d, bbl/h, bbl/min, g/s, t/h, kg/h, kg/min, m ³ , l, USgal, bbl, g, t, kg, W, kW, MW, J, kJ, MJ, Signal (dB), noise (dB), SNR (dB), C m/s (measured sound speed), CU (housing temperature), K (correction factor), REY (Reyn- olds number), V (battery voltage) SOS, DEN, KIN, DYN, SHC (sound speed, den- sity, kinematic viscosity, dynamic viscosity, Specific Heat Capacity from inputs/calculation), TEMP (specified or measured fluid temperature), PRESS (specified or measured fluid pressure), Tin, Tout (inlet and outlet temperature) Other (Assignable input or calculated value), Math (Calculated value – see below). Other (Assignable input or calculated value), Math (Calculated value – see below).
		Pipe material	<i>Select from list</i> ↑↓ Stainless steel, Carbon steel Ductile cast iron, Grey cast iron Copper, Lead PVC, PP, PE, ABS Glass, Cement User (pipe c-speed)
		Pipe c-speed	<i>Only if user pipe material selected</i> 500 ... 5000 m/s
		Outside diame- ter	10 ... 3000 mm
		Wall thickness	0.5 ... 75 mm
		Fluid	<i>Select from list</i> ↑↓ Water, Salt water Acetone, Alcohol, Ammonia Carbon Tet (carbon tetrachloride) Ethanol, Ethyl alcohol, Ethyl ether Ethylene glycol, Glycol/water 50% Kerosene, Methanol, Methyl alcohol Milk, Naphtha, Car oil Freon R134a, Freon R22 Hydrochloric acid, Sour cream, Sulphuric acid Toluene, Vinyl chloride User (enter kinematic viscosity, density, medium c-speed)
		Kinematic vis- cosity	<i>Only if user fluid selected</i> 0.001 ... 30000 mm ² /s
		Density	<i>Only if user fluid selected</i> 100 ... 2000 kg/m ³
		Medium c- speed	<i>Only if user fluid selected</i> 800 ... 3500 m/s
		Temperature	-30 ... 300 °C
		Liner Material	<i>Select from list</i> ↑↓ None, Epoxy, Rubber, PVDF, PP, Glass, Cement, User (liner c-speed)
		Liner thickness	<i>Only if lining material selected</i> 1.0 ... 99.0 mm
		Liner c-speed	<i>Only if lining material selected</i> 500 ... 5000 m/s
		Passes	<i>Select from list</i> ↑↓ Auto 1...16
Totalizer			Off, On, Reset + (positive total), Reset – (negative total) Reset Both

	Stored Setup		
		Load	<i>Load from list</i>
		Save	<i>Save to list – use alphanumeric keys to enter name</i>
		Delete	<i>Delete from list</i>
	Start Measurement		
		Sensor type	<i>Indication of sensor type and serial number if automatically detected, otherwise select from list ↑↓</i> <i>As Setup Wizard</i>
		Sensor frequency	<i>SP1, only for special, unrecognised sensors</i>
		Wedge angle	<i>SP2, only for special, unrecognised sensors</i>
		Wedge c-speed 1	<i>SP3, only for special, unrecognised sensors</i>
		Wedge c-speed 2	<i>SP4, only for special, unrecognised sensors</i>
		Crystal offset	<i>SP5, only for special, unrecognised sensors</i>
		Spacing offset	<i>SP6, only for special, unrecognised sensors</i>
		Zero flow offset	<i>SP7, only for special, unrecognised sensors</i>
		Upstream offset	<i>SP8, only for special, unrecognised sensors</i>
		K factor	<i>Calibration factor (slope)</i>
		Sensor placement	<i>Adjust sensor position</i>
Installation			
	Pipe		
		Material	<i>Select from pipe material list ↑↓</i>
		Outside diameter	<i>6 ... 6500 mm</i>
		Wall thickness	<i>0.5 ... 75 mm</i>
		C-speed	<i>600 ... 6554 m/s (transverse sound speed)</i>
		L-Speed	<i>600 ... 8000 m/s (longitudinal sound speed)</i>
		Circumference	<i>18.8 ... 20420 mm</i>
		Roughness	<i>0.0 ... 10 mm</i>
	Medium		
		Fluid	<i>Select from fluid list ↑↓</i>
		Kinematic viscosity	<i>0.000 ... 30000 mm²/s</i>
		Density	<i>100 ... 2000 kg/m³</i>
		C-speed	<i>800 ... 3500 m/s</i>
		Temperature	<i>-30 ... 300 °C</i>
	Lining		
		Material	<i>Select from material list ↑↓</i>
		Thickness	<i>1 ... 99 mm</i>
		C-speed	<i>500 ... 5000 m/s</i>
	Passes		
		Passes	<i>Select from list ↑↓</i>
Display			
		Select line of display	<i>Select from unit list ↑↓</i>

		Damping	<i>Reduces fluctuations in the display output 1 ... 255 s</i>
		Metric / Imp	<i>Use metric or imperial units for entered data</i>
In/Output			
		Type	<i>Select from list ↑↓</i>
	Current out	Source	<i>Off Channel 1 System</i>
		Units	<i>Select from list ↑↓</i>
		Min Value	<i>Min. process variable (PV) value that corresponds to 0/4 mA</i>
		Max Value	<i>Max. process variable (PV) value that corresponds to 20 mA</i>
		Damping	<i>Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s</i>
		Span	<i>0-20mA or 4-20mA</i>
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓ Hold (last value for specified time), 3.8mA, 21.0mA</i>
	Open Collector Out	Mode	<i>Yes – Pulse output on No – Pulse output off</i>
		Pulse Value	<i>Totaliser value of selected PV at which a pulse is generated, e.g. PV = [m3/h], Pulse Value = 10, a pulse is output every 10 m3 0.01 ... 1000</i>
		Pulse Width	<i>Width of the pulse 30 ... 999 ms</i>
		Calc. Max	<i>This is the calculated max. number of pulses per second., i.e. the max. pulse rate in Hz</i>
	Voltage out	Source	<i>Off Channel 1 System</i>
		Units	<i>Select from list ↑↓</i>
		Min Value	<i>Min. process variable (PV) value that corresponds to 0v</i>
		Max Value	<i>Max. process variable (PV) value that corresponds to 10v</i>
		Damping	<i>Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s</i>
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓</i>
	Frequency out	Source	<i>Off Channel 1 System</i>
		Units	<i>Select from list ↑↓</i>
		Min Value	<i>Min. process variable (PV) value that corresponds to minimum frequency</i>
		Max Value	<i>Max. process variable (PV) value that corresponds to maximum frequency</i>
		Damping	<i>Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s</i>
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓</i>
	Relay / Optical relay		
		Mode	<i>Off – Permanently off On – Permanently energised</i>

			Alarm – PV alarm switch Math – Calculated value alarm switch Fault – Allocated to system failures, see error report list
		On Point	Value of PV at which the relay energises when in alarm mode
		Off Point	Value of PV at which the relay de-energises when in alarm mode
	Current In		
		Source (channel)	Select from list ↑↓ Off, Channel 1, Channel 2, Math 1, Math 2 System, Test
		Source (value)	Select from list ↑↓ Density, Viscosity, Temperature, Other
			Minimum, Maximum, Span settings as on outputs
	PT100		Temperature inputs
		Source	Fixed – A fixed temperature can be entered under value PT100 – Value read from PT100 temperature sensor in °C
		Value	Enter fixed user defined value 0 ... 250 °C
		Offset	Enter fixed user defined value -100 ... 100 °C
	RS 485		[where specified]
	Modbus RTU		[where specified]
	HART		[where specified]
System			
	Instrument info		
		Model Code	210
		Serial No.	Example: 21000013
	Calculation		
		Low F Cut	± Low flow velocity cut off 0 ... 0.025 m/s
		Max F Cut	± Maximum flow velocity cut off 0 ... 30 m/s
		Corrected	Apply flow velocity profile correction Yes No
		PV Offset	Calibration process variable zero offset -30 ... 30 m/s
		PV Scaling	Calibration process variable gradient scaling 0.0010 ... 10000 units (based on flow velocity)
		Zero Cal	Zero calibration settings
		Zero	Perform auto zero calibration Yes No
		Track	Track zero offset Yes No
		Delta	Zero flow delta time offset in ns, read from sensor PROM or entered directly for special sensors
		Timeup	Upstream transit-time offset in µs, allows for fixed delays in special sensors, buffer rods and extension leads
		Heat Capacity	Specific heat capacity of medium

	User		
		Identifier	<i>Example: Pump P3A 9 character string</i>
		Tag No.	<i>Example: 1FT-3011 9 character string</i>
	Test		
		Installation	<i>Control system simulation: A cyclic repetition of increasing flow velocity across the measureable range. All configured outputs respond as if this was a measured change in flow. Yes, No</i>
		Display	<i>Display screen test routine</i>
		Keypad	<i>Keypad test routine</i>
		Memory	<i>Memory test routine, Memory erase yes/no</i>
		Peripherals	<i>Unit temperature, time, date, clock, battery meter, charger test routine</i>
		Ultrasonics	<i>Tests ultrasonic board and sensors</i>
	Settings		
		Date	<i>Example: 03/10/07</i>
		Time	<i>Example: 09:27:00</i>
		Date Format	<i>Select from list ↑↓ dd/mm/yy mm/dd/yy yy/mm/dd</i>
		Language	<i>Select from list ↑↓ As installed</i>
		Keypad	<i>Enable keypad sound Yes No</i>
	Defaults		<i>Reload factory default settings, except for date and time Yes No</i>
Diagnostics			
		Temperature	<i>Shows control unit temperature</i>
		Log Memory	<i>Percentage of unused datalogger memory, estimated time remaining</i>
		Battery	<i>Battery charge level (percentage)</i>
		Volts	<i>Battery voltage</i>
		Capacity	<i>Remaining battery capacity (mAh)</i>
Datalogger			
		Interval	<i>A value of zero turns the datalogger off, a non-zero value turns the datalogger on and defines the logging interval. 0 ... 999 s</i>
		Selection	<i>Select up to 10 items from list ↑↓ ENTER to select, 0 to remove Available items as in list for display / output</i>
		Low Memory	<i>Warning output: The amount of memory remaining at which the flowmeter begins to give an audible warning. 4 ... 100 %</i>
		Log wrap	<i>Saves "selected" items as a continuous stream without headers (Note : this means files cannot be processed by Isoflux+ SW) Yes/No</i>
		Log Download	<i>Sends logger content to serial communication port.</i>

		Log Erase	Erase datalogger Yes / no
Serial Comms			
		Mode	Select from list ↑↓ None Printer, Diagnostic, Log download, Calibration Test (not normally used by user)
		Baud	Select from list ↑↓ 9600, 19200, 57600, 115200
		Parity	Select from list ↑↓ None Even (Default) Odd
		Type	RS232, RS485, etc. (as installed)

Table 5: Firmware menu structure

5.2 Diagnostics

Diagnostic screens, where specified, can be viewed directly during measurement using the programmer or through the menu structure (screen only).

5.3 Display settings

The main Process Value (PV) is the primary measurement data. Customer specific settings for data to be displayed can be set in the appropriate menu items. The PV can be selected from a list of available items.


5.3.1 Main PV

The main Process Value (PV) is the primary measurement data, and is usually displayed as the Middle Units.

5.4 Output settings

The assignment of output slots is detected by the flowmeter, and will be as appears in the table in the "In/Output" menu - first line = Slot 1, second line = Slot 2 etc.

Example with passive current input on slot 1 and active current output on slot 2 shown below:

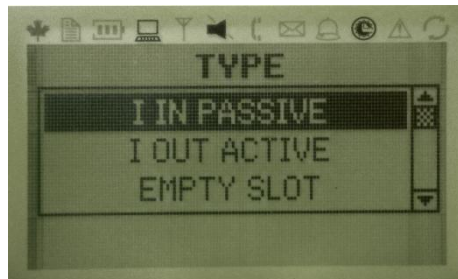

5.4.1 Serial interface RS 232

The RS 232 serial interface can be used to transmit data on-line (where specified) or to communicate with the programmer (where applicable).


5.4.2 Serial interface RS 485 / Modbus RTU

The RS 485 interface is used for networking up to 32 flowmeters to a centralised computer system. Each flowmeter is given a unique address to be

able to communicate effectively. The communication protocol used conforms to the conventions of the Modbus RTU protocol, a description of which is given in a separate document. Please refer to customer support for further information.

In addition, the ASCII printer output can also be directed through the RS 485 interface.

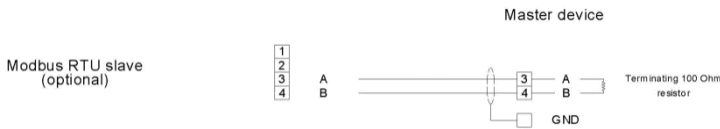


Wiring	
Setup	Please refer to customer support.
Operation	Please refer to customer support.

5.4.3 HART compatible output

The KF150 can also be configured with an optional module which responds to output commands conforming to the HART protocol. Please refer to customer support for further information.

HART® is a registered trademark of the HART Communication Foundation.



Wiring	
Setup	Please refer to customer support.
Operation	Please refer to customer support.


Analogue outputs

5.4.4 Analogue current output 0/4 ... 20 mA

The analogue current outputs operate in a 4 ... 20 mA or 0 ... 20 mA span.

Current outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

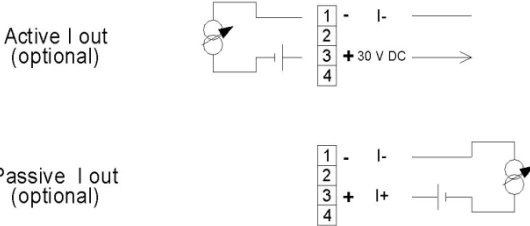

Wiring	
Electrical characteristics	<p>0/4...20 mA active and 4...20 mA passive options. Galvanically isolated from main electronics and from other I/O's. Passive: U=9...30 V, RLoad=50 ohm typical. Resolution: 16 bit.</p>

Accuracy: 0.1 % of MV.
 Active: RLoad<500 ohm, U=30 V.
 Resolution: 16 bit.
 Accuracy: 0.1 % of MV.

5.4.5 Analogue voltage output 0 – 10 v

Voltage outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.



Wiring	<div style="display: flex; align-items: center; justify-content: space-between;"> <div>Volts out (optional)</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">1 2 3 4</div> <div> V- ——— V+ ———→ </div> </div> </div>
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's. Range 0...10 V. RLoad=1000 ohm. Resolution: 16 bit. Accuracy: 0.1% of MV.

5.4.6 Analogue frequency output (passive)

Frequency outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.



Wiring	<div style="display: flex; align-items: center; justify-content: space-between;"> <div>Frequency (analogue output) (optional)</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">1 2 3 4</div> <div> ——— ——— ——— ——— </div> </div> </div>
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's. Open-collector: 2...10000 Hz. U=24 V, I _{max} =4 mA.

Digital outputs

5.4.7 Digital open collector output

Open-Collector outputs may be assigned to process values in the “mode” section of the output menu. The outputs are configured using the menu structure.

The totaliser function is enabled and controlled using the menu structure





Wiring	<div style="display: flex; align-items: center; justify-content: space-between;"> <div>Optically switched relay "Open-Collector" (optional)</div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">1 2 3 4</div> <div> + ——— NO ——— - ——— NO ——— - ——— NC ——— + ——— NC ——— </div> </div> </div>
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's. Totaliser pulse, value 0.01...1000/unit. Active high and active low available. Width 1...990 ms. U=24 V, I _{max} =4 mA.

5.4.8 Digital relay output

Relay outputs may be assigned to process values in the “mode” section of the output menu. The relay outputs are configured using the menu structure.





Wiring	 
Electrical characteristics	<p>Form A (SPDT-NO and NC) contacts</p> <p>Width 3...990 ms.</p> <p>U=48 V, I_{max}=250 mA. Galvanically isolated from main electronics and from other I/O's.</p> <p>Mode: Alarm, fault, totaliser (programmable).</p> <p>1 Form A (SPST-NO) contacts.</p> <p>1 Form A (SPST-NC) contacts.</p> <p>Width 3...990 ms.</p> <p>U=48 V, I_{max}=250 mA.</p>

5.5 Input configuration

5.5.1 PT100 inputs



Inputs



Wiring	<p>Temperature input PT100, 4 wire (optional)</p>  <p>Temperature input PT100, 3 wire (optional)</p> 
Electrical characteristics	<p>3 and 4 wire options.</p> <p>Galvanically isolated from main electronics and from other I/O's.</p> <p>Temperature: Range -50 ... 400 °C.</p> <p>Resolution: 0.01 K.</p> <p>Accuracy: ±0.1 K.</p>

5.5.2 Analogue current input 0/4 ... 20 mA



Wiring	<p>Analogue input (optional)</p>  <p>Analogue input (optional)</p> 
Electrical characteristics	<p>Active (top) or passive (bottom) variants</p> <p>Measuring range active = 0 ... 20 mA at 30 V</p> <p>Measuring range passive = 4 ... 20 mA</p> <p>Accuracy = 0.1 % of measured value</p>

5.5.3 Heat quantity measurement (HQM) – [where installed]

If a heat quantity unit is specified for the Process Value, the KF100 will prompt the user for the Specific Heat Capacity of the medium in J/g/K (for example 4.186 J/g/K for water).

This may also be entered in the System\Calculation sub-menu.



The In/Output menu will then allow the user to select the temperature input source; either PT100 temperature sensors or a fixed value for measurement against a known inlet or outlet temperature. Where PT100 sensors are selected, the flowmeter will prompt the user for a temperature offset, which may be useful where the temperature of the medium differs from the temperature of the pipe wall (for example with unlagged pipes). If a fixed value is selected, the meter will ask the user to specify this value.

When heat quantity units are selected, these behave as any other Process Value and may be totalized, or applied to a Process Output.


5.6 Sound velocity measurement (SVM)



The measured sound velocity (SOS) is available as a Process Value and a diagnostic function (where specified) during measurement and may be applied to a Process Output by selecting “C m/s” from the appropriate menu.

5.7 Scope function (where provided)

Isoflux flowmeters have an additional scope function which shows a representation of the pulse received by the sensors.

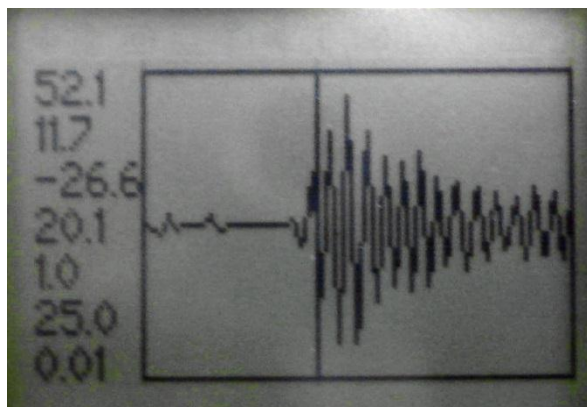

In addition to displaying the received pulse, this screen lists the following data (from top to bottom) :

Gain (dB)
Signal (dB)
Noise (dB)
Transit time (us)
Delta (ns) - [time downstream minus time upstream]
Control unit temperature (degC)
Flow (m/s)

6 Maintenance

ISOFLUX flowmeters are maintenance free concerning the flow measurement functions. Within the scope of periodic inspections, regular inspection for signs of damage or corrosion is recommended for the transducers, the junction box if installed, and the flowmeter housing.

6.1 Service/Repair

ISOFLUX flowmeters have been carefully manufactured and tested. If installed and operated in accordance with the operating instructions, no problems are usually experienced.



Should you nevertheless need to return a device for inspection or repair, please pay attention to the following points:

- Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, Isoil may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that Isoil can only service this device if it is accompanied by a Return Authorization Number (RAN) confirming that the device is safe to handle.



If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:

- to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.

7 Troubleshooting

Most problems with measurement are due to poor signal strength or quality. Initial checks should include:



- Has sufficient acoustic coupling paste been applied?
- Can the number of sound passes be changed? As a general rule, more passes will improve accuracy, fewer passes will give better signal strength.
- Are there any nearby sources of noise or disturbance?
- Can the signal be improved by moving the sensors around the circumference of the pipe?
- Are the application parameters correct?

Should there be the need to call customer service, please let us know the following details:

- Model code
- Serial number
- SW, HW revision
- Error log list

Possible error messages may include the following:

Error list

Error message	Group	Description	Error handling
USB INIT FAIL	Hardware	Internal board communication error	Power on/off, otherwise call customer support
NO SERIAL NO.	Hardware	Failed to read from FRAM	Call customer support
NO VERSION NO.	Hardware	Failed to read from FRAM	Call customer support
PARA READ FAIL	Hardware	Failed to read from FRAM	Load defaults, otherwise call customer support
PARA WRITE FAIL	Hardware	Failed to write to FRAM	Load defaults, otherwise call customer support
VAR READ FAIL	Hardware	Failed to read from FRAM	Call customer support
VAR WRITE FAIL	Hardware	Failed to write to FRAM	Call customer support
SYSTEM ERROR	Hardware		Call customer support
VISIBILITY ERR	Hardware	Failed to read from FRAM	Call customer support
FRAM LONG WRITE ERR	Hardware	Failed to write to FRAM	Call customer support
FRAM READ ERR	Hardware	Failed to read from FRAM	Call customer support
RTC ERR	Hardware	Real Time Clock failure	Power on/off, otherwise call customer support
EXTMEM ERR	Hardware	Logger memory failure	Power on/off, otherwise call customer support
SPI ERR	Hardware	SPI bus failure	Power on/off, otherwise call customer support
I2C ERR	Hardware	I2C bus failure	Power on/off, otherwise call customer support
MATH ERR	Software	Internal calculation error	Call customer support
STACK ERR	Software	Internal calculation error	Call customer support
ADDR ERR	Software	Internal calculation error	Call customer support
OSC ERR	Software	Internal calculation error	Call customer support
ADC ERR	Software	Internal calculation error	Call customer support
IO ERR	Software	Internal calculation error	Call customer support
TIMING ERR	Software	Internal calculation error	Call customer support
COMM INIT ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM START ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM HS0 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM HS1 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ AVE ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ RAW ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ HISTORY ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM CRC ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support

SENSOR COU- PLING ERR	Application	Weak sensor coupling, low SNR	Recouple sensors, check installation, re- duce number of passes, look for other location, call customer support
--------------------------	-------------	----------------------------------	--

Table 6: Error messages

7.1 Data download difficulties

If difficulties are encountered downloading the logger data: -

- Check that the flowmeter is switched on and not in measurement mode.
- Check that the same number COM port is allocated in the "Device Manager" (or equivalent) as is set in the Isoflux+ software.
- Check that the settings (baud, parity, word length, stop bits) are identical.
- Use the supplied connectors – whether connecting to a 9-pin COM port or converting from serial communication to a Universal Serial Bus (USB).
- Is the logger in "Wrap" mode? If "yes", use a terminal program and the "Log download" command. If "No", Isoflux+ software may also be used.

8 Technical data

Material	Sound Speed* Shear Wave (at 25 °C)	
	m/s	ft/s
Steel, 1% Carbon, hardened	3,150	10,335
Carbon Steel	3,230	10,598
Mild Steel	3,235	10,614
Steel, 1% Carbon	3,220	10,565
302 Stainless Steel	3,120	10,236
303 Stainless Steel	3,120	10,236
304 Stainless Steel	3,141	10,306
304L Stainless Steel	3,070	10,073
316 Stainless Steel	3,272	10,735
347 Stainless Steel	3,095	10,512
"Duplex" stainless steel	2,791	9,479
Aluminium	3,100	10,171
Aluminium (rolled)	3,040	9,974
Copper	2,260	7,415
Copper (annealed)	2,325	7,628
Copper (rolled)	2,270	7,448
CuNi (70%Cu 30%Ni)	2,540	8,334
CuNi (90%Cu 10%Ni)	2,060	6,759
Brass (Naval)	2,120	6,923
Gold (hard-drawn)	1,200	3,937
Inconel	3,020	9,909
Iron (electrolytic)	3,240	10,630
Iron (Armco)	3,240	10,630
Ductile Iron	3,000	9,843
Cast Iron	2,500	8,203
Monel	2,720	8,924
Nickel	2,960	9,712
Tin (rolled)	1,670	5,479
Titanium	3,125	10,253
Tungsten (annealed)	2,890	9,482
Tungsten (drawn)	2,640	8,661
Tungsten carbide	3,980	13,058
Zinc (rolled)	2,440	8,005
Glass (pyrex)	3,280	10,761
Glass (heavy silicate flint)	2,380	7,808
Glass (light borate crown)	2,840	9,318
Nylon	1,150	3,772
Nylon, 6-6	1,070	3,510
Polyethylene (LD)	540	1,772
PVC, CPVC	1,060	3,477
Acrylic resin	1,430	4,690
PTFE	2,200	7,218

* Please note these values are to be considered nominal. Solids may be inhomogeneous and anisotropic. Actual values depend on exact composition, temperature, and to a lesser extent, on pressure and stress.

All data given at 25 °C (77 °F) unless otherwise stated

Substance	Chemical Formula	Specific Gravity	Sound Speed		Change Kinematic Viscosity v/°C		
			m/s	ft/s	m/s/°C	mm ² /s	x10 ⁻⁶ ft ² /s
Acetic anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, nitrile	C ₂ H ₃ N	0.783	1,290	4,232.3	4.1	0.441	4.745
Acetic acid, ethyl ester	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.467	5.025
Acetic acid, methyl ester	C ₃ H ₆ O ₂	0.934	1,211	3,973.1		0.407	4.379
Acetone	C ₃ H ₆ O	0.791	1,174	3,851.7	4.5	0.399	4.293
Acetylene dichloride	C ₂ H ₂ Cl ₂	1.26	1,015	3,330.1	3.8	0.400	4.304
Alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.02
Ammonia	NH ₃	0.771	1,729 33 °C)	(- 5,672.6 (-27 °C)	6.68	0.292 (-33 °C)	3.141 (-27 °F)
Benzene	C ₆ H ₆	0.879	1,306	4,284.8	4.65	0.711	7.65
Benzol	C ₆ H ₆	0.879	1,306	4,284.8	4.65	0.711	7.65
Bromine	Br ₂	2.928	889	2,916.7	3.0	0.323	3.475
n-Butane(2)	C ₄ H ₁₀	0.601 (0°C)	1,085 5° C)	(- 3,559.7 (23 °C)	5.8		
2-Butanol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
sec-Butylalcohol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
n-Butyl bromide (46)	C ₄ H ₉ Br	1.276 (20°C)	1,019 (20°C)	3,343.2 (68°F)		0.49 (15°C)	5.272 (59°C)
n-Butyl chloride (22,46)	C ₄ H ₉ Cl	0.887	1,140	3,740.2	4.57	0.529 (15°C)	5.692 (59°F)
Carbon tetrachloride	CCl ₄	1.595 (20°C)	926	3,038.1	2.48	0.607	6.531
Carbon tetrafluoride (Freon 14)	CF ₄	1.75 (-150 °C)	875.2 150 °C)	(- 2,871.5 (-238 °F)	6.61		
Chloroform	CHCl ₃	1.489	979	3,211.9	3.4	0.55	5.918
Dichlorodifluoromethane (Freon 12)	CCl ₂ F ₂	1.516 (40 °C)	774.1	2,539.7	4.24		
Ethanol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.39	14.956
Ethyl acetate	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.489	5.263
Ethyl alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.020
Ethyl benzene	C ₈ H ₁₀	0.867 (20 °C)	1,338 (20 °C)	4,189.8 (68 °F)		0.797 (17 °C)	8.575 (63 °F)
Ether	C ₄ H ₁₀ O	0.713	985	3,231.6	4.87	0.311	3.346
Ethyl ether	C ₄ H ₁₀ O	0.713	985	3,231.6	4.87	0.311	3.346
Ethylene bromide	C ₂ H ₄ Br ₂	2.18	995	3,264.4		0.79	8.5
Ethylene chloride	C ₂ H ₄ Cl ₂	1.253	1,193	3,914		0.61	6.563
Ethylene glycol	C ₂ H ₆ O ₂	1.113	1,658	5,439.6	2.1	17,208 (20°C)	185.158 (68°F)
Fluorine	F	0.545 (-143 °C)	403 143 °C)	(- 1,322.2 (-225 °F)	11.31		
Formaldehyde, methyl ester	C ₂ H ₄ O ₂	0.974	1,127	3,697.5	4.02		
Freon R12			774.2	2,540			
Glycol	C ₂ H ₆ O ₂	1.113	1,658	5,439.6	2.1		
50% Glycol/50% H ₂ O			1,578	5,177			
Isopropanol	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Isopropyl alcohol (46)	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Kerosene		0.81	1,324	4,343.8	3.6		

Methane	CH ₄	0.162 (-89 °C)	405 (-89 °C)	1,328.7 (-128 °F)	17.5		
Methanol	CH ₄ O	0.791 (20 °C)	1,076	3,530.2	292	0.695	7.478
Methyl acetate	C ₃ H ₆ O ₂	0.934	1,211	3,973.1		0.407	4.379
Methyl alcohol	CH ₄ O	0.791	1,076	3,530.2	292	0.695	7.478
Methyl benzene	C ₇ H ₈	0.867	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644	7.144
Milk, homogenized			1,548	5,080			
Naphtha		0.76	1,225	4,019			
Natural Gas		0.316 (-103 °C)	753 (-103 °C)	2,470.5 (-153 °F)			
Nitrogen	N ₂	0.808 (-199 °C)	962 (-199 °C)	3,156.2 (-326 °F)		0.217 (-199 °C)	2.334 (-326 °F)
Oil, Car (SAE 20a.30)		1.74	870	2,854.3		190	2,045.093
Oil, Castor	C ₁₁ H ₁₀ O ₀	0.969	1,477	4,845.8	3.6	0.670	7.209
Oil, Diesel		0.80	1,250	4,101			
Oil, Fuel AA gravity		0.99	1,485	4,872	3.7		
Oil (Lubricating X200)			1,530	5,019.9			
Oil (Olive)		0.912	1,431	4,694.9	2.75	100	1,076.365
Oil (Peanut)		0.936	1,458	4,738.5			
Propane (-45 to -130 °C)	C ₃ H ₈	0.585 (-45 °C)	1,003 (-45 °C)	3,290.6 (-49 °F)	5.7		
1-Propanol	C ₃ H ₈ O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)			
2-Propanol	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Propene	C ₃ H ₆	0.563 (-13 °C)	963 (-13 °C)	3,159.4 (9 °F)	6.32		
n-Propyl-alcohol	C ₃ H ₈ O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)		2.549	27.427
Propylene	C ₃ H ₆	0.563 (-13 °C)	963 (-13 °C)	3,159.4 (9 °F)	6.32		
Refrigerant 11	CCl ₃ F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56		
Refrigerant 12	CCl ₂ F ₂	1.516 (-40 °C)	774.1 (-40 °C)	2,539.7 (-40 °C)	4.24		
Refrigerant 14	CF ₄	1.75 (-150 °C)	875.24 (-150 °C)	2,871.6 (-268 °F)	6.61		
Refrigerant 21	CHCl ₂ F	1.426 (0 °C)	891 (0 °C)	2,923.2 (32 °F)	3.97		
Refrigerant 22	CHClF ₂	1.491 (-69 °C)	893.9 (50 °C)	2,932.7 (122 °F)	4.79		
Refrigerant 113	CCl ₂ F-CClF ₂	1.563	783.7 (0 °C)	2,571.2 (32 °F)	3.44		
Refrigerant 114	CClF ₂ -CClF ₂	1.455	665.3 (10 °C)	2,182.7 (14 °F)	3.73		
Refrigerant 115	C ₂ ClF ₅		656.4 (-50 °C)	2,153.5 (-58 °F)	4.42		
Refrigerant C318	C ₄ F ₈	1.62 (-20 °C)	574 (-10 °C)	1,883.2 (14 °F)	3.88		
Sodium nitrate	NoNO ₃	1.884 (336 °C)	1,763.3 (336 °C)	5,785.1 (637 °F)	0.74	1.37 (336 °C)	14.74 (637 °F)
Sodium nitrite	NoNO ₂	1.805 (292 °C)	1,876.8 (292 °C)	6,157.5 (558 °F)			
Sulphur	S		1,177 (250 °C)	3,861.5 (482 °F)	-1.13		
Sulphuric Acid	H ₂ SO ₄	1.841	1,257.6	4,126	1.43	11.16	120.081

Tetrachloroethane	C ₂ H ₂ Cl ₄	1553 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)	1.19	12.804
Tetrachloro-ethene	C ₂ Cl ₄	1.632	1,036	3,399		
Tetrachloro-Methane	CCl ₄	1.595 (20 °C)	926	3,038.1	0.607	6.531
Tetrafluoro-methane (Freon 14)	CF ₄	1.75 (-150 °C)	875.24 (-150 °C)	2,871.5 (-283 °F)	6.61	
Toluene	C ₇ H ₈	0.867 (20 °C)	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644 6.929
Toluol	C ₇ H ₈	0.866	1,308	4,291.3	4.2	0.58 6.24
Trichloro-fluoromethane (Freon 11)	CCl ₃ F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56	
Turpentine		0.88	1,255	4,117.5	1.4	15.064
Water, distilled	H ₂ O	0.996	1,498	4,914.7	-2.4	1.00 10.76
Water, heavy	D ₂ O		1,400	4,593		
Water, sea		1.025	1531	5023	-2.4	1.00 10.76

Temperature		Sound Speed in Water	
° C	° F	m/s	ft/s
0	32.0	1402	4600
1	33.8	1407	4616
2	35.6	1412	4633
3	37.4	1417	4649
4	39.2	1421	4662
5	41.0	1426	4679
6	42.8	1430	4692
7	44.6	1434	4705
8	46.4	1439	4721
9	48.2	1443	4734
10	50.0	1447	4748
11	51.8	1451	4761
12	53.6	1455	4774
13	55.4	1458	4784
14	57.2	1462	4797
15	59.0	1465	4807
16	60.8	1469	4820
17	62.6	1472	4830
18	64.4	1476	4843
19	66.2	1479	4853
20	68.0	1482	4862
21	69.8	1485	4872
22	71.6	1488	4882
23	73.4	1491	4892
24	75.2	1493	4899
25	77.0	1496	4908
26	78.8	1499	4918
27	80.6	1501	4925
28	82.4	1504	4935
29	84.2	1506	4941
30	86.0	1509	4951
31	87.8	1511	4958
32	89.6	1513	4964
33	91.4	1515	4971
34	93.2	1517	4977

35	95.0	1519	4984
36	96.8	1521	4984
37	98.6	1523	4990
38	100.4	1525	4997
39	102.2	1527	5010
40	104.0	1528	5013
41	105.8	1530	5020
42	107.6	1532	5026
43	109.4	1534	5033
44	111.2	1535	5036
45	113.0	1536	5040
46	114.8	1538	5046
47	116.6	1538	5049
48	118.4	1540	5053
49	120.2	1541	5056
50	122.0	1543	5063
51	123.8	1543	5063
52	125.6	1544	5066
53	127.4	1545	5069
54	129.2	1546	5072
55	131.0	1547	5076
56	132.8	1548	5079
57	134.6	1548	5079
58	136.4	1548	5079
59	138.2	1550	5086
60	140.0	1550	5086
61	141.8	1551	5089
62	143.6	1552	5092
63	145.4	1552	5092
64	147.2	1553	5092
65	149.0	1553	5095
66	150.8	1553	5095
67	152.6	1554	5099
68	154.4	1554	5099
69	156.2	1554	5099
70	158.0	1554	5099
71	159.8	1554	5099
72	161.6	1555	5102
73	163.4	1555	5102
74	165.2	1555	5102
75	167.0	1555	5102
76	167.0	1555	5102
77	170.6	1554	5099
78	172.4	1554	5099
79	174.2	1554	5099
80	176.0	1554	5099
81	177.8	1554	5099
82	179.6	1553	5095
83	181.4	1553	5095
84	183.2	1553	5095
85	185.0	1552	5092
86	186.8	1552	5092
87	188.6	1552	5092
88	190.4	1551	5089

89	192.2	1551	5089
90	194.0	1550	5086
91	195.8	1549	5082
92	197.6	1549	5082
93	199.4	1548	5079
94	201.2	1547	5076
95	203.0	1547	5076
96	204.8	1546	5072
97	206.6	1545	5069
98	208.4	1544	5066
99	210.2	1543	5063
100	212.0	1543	5063
104	220.0	1538	5046
110	230.0	1532	5026
116	240.0	1524	5000
121	250.0	1516	5007
127	260.0	1507	4944
132	270.0	1497	4912
138	280.0	1487	4879
143	290.0	1476	4843
149	300.0	1465	4807
154	310.0	1453	4767
160	320.0	1440	4725
166	330.0	1426	4679
171	340.0	1412	4633
177	350.0	1398	4587
182	360.0	1383	4538
188	370.0	1368	4488
193	380.0	1353	4439
199	390.0	1337	4387
204	400.0	1320	4331
210	410.0	1302	4272
216	420.0	1283	4210
221	430.0	1264	4147
227	440.0	1244	4082
232	450.0	1220	4003
238	460.0	1200	3937
243	470.0	1180	3872
249	480.0	1160	3806
254	490.0	1140	3740
260	500.0	1110	3642

Specific Heat Capacity

Medium	SHC (KJ/Kg.K)
Ethanol @ 0 deg C	2.30
Ethylene Glycol	2.36
Freon R12 @ 5 deg C	0.88
Light oil @ 15 deg C	1.80
Mineral Oil	1.67
Paraffin	2.13
Propane @ 0 deg C	2.40
Water	4.18
Water (salt)	3.93

9 Specification

General

Measuring principle : Ultrasonic time difference
 correlation principle
 Flow velocity range : 0.01 ... 25 m/s
 Resolution : 0.25 mm/s
 Repeatability : 0.15 % of measured value \pm 0.015 m/s
 Accuracy : \pm 1 ... 3 % of measured value depending on application,
 \pm 0.5 % of measured value with process calibration
 Turn down ratio : 1/100
 Gaseous and solid content of liquidmedia : < 10 % of volume

Flow transmitter

Enclosure : Wall or pipe mounted housing
 Degree of protection : IP 66 according EN 60529
 Operating temperature : -10 ... 60 °C (14 ... 140 °F)
 Housing material : Die cast aluminium
 Flow channels : 1
 Power supply : 100 ... 240 V AC 50/60 Hz,
 9 ... 36 V DC, specials upon request
 Display : Optional LCD graphic display, 128 x 64 dots, backlit
 Keypad : Optional four button internal keypad or programmer
 Dimensions : H 120 x W 160 x D 80 mm without cable glands
 Weight : Approx. 750g
 Power consumption : < 5 W
 Display damping : 0 ... 99 s
 Measurement rate : 1Hz standard, higher rates on application
 Response time : 1 s
 Operating languages : Italian, English

Quantity and units of measurement

Volumetric flow rate : m³/h, m³/min, m³/s, l/h, l/min, l/s,
 USgal/h (US gallons per hour),
 USgal/min, USgal/s, bbl/d (barrels
 per day), bbl/h, bbl/min, bbl/s
 Flow velocity : m/s, ft/s, inch/s
 Mass flow rate : g/s, t/h, kg/h, kg/min
 Volume : m³, l, gal (US gallons), bbl
 Mass : g, kg, t
 Heat flow : W, kW, MW (only with heat quantity measurement option)
 Heat quantity : J, kJ, MJ (only with heat quantity measurement option)

Sig dB (signal), noise dB, SNR,
 C m/s (sound speed), CU (housing temperature)
 Tin, Tout (inlet and outlet temperature)

Communication

Serial interface : RS 232, RS 485, Modbus RTU, HART (optional)
 Data : Measured data, parameter set and configuration,

Isoflux+ Software

Functionality : Downloading of measured values/parameter sets, graphical presentation, list format, export to third party software, on-line transfer of measured data
 Operating systems : Windows 2000, NT, XP, Vista, 7; Linux; Mac (optional)

Process inputs / Process Outputs (maximum of four per instrument)

Inputs

Temperature : PT 100, three or four-wire circuit, measuring range - 50 ... 400 °C, resolution 0.1K, accuracy ± 0.2 K
Current : 0 ... 20 mA active or 4 ... 20 mA passive, U = 30 V, Ri = 50 Ohm, accuracy 0.1 % of MV

Outputs

Current : 0/4 ... 20 mA, active (RLoad < 500 Ohm), 16 bit resolution, U = 30 V, accuracy = 0.1 %
Voltage : On request, 0 ... 10 V, Ri = 500 Ohm
Frequency : On request
Digital (Optical - Open Collector) : U = 24 V, I_{max} = 4 mA
Digital (relay) : Form C (SPDT-CO) contacts, U = 48 V, I_{max} = 250 mA

Clamp-on sensors

Type K1L, K1P, K1E

Diameter range : 50 ... 1000 mm
Dimensions : 60 x 30 x 34 mm
Material : K1L Stainless steel, K1P plastic
Temperature range :
Type K1P: -30 ... 60 °C (-22 ... 122 °F)
Type K1L: -30 ... 80 °C (-22 ... 176 °F)
Type K1N: -30 ... 130 °C (-22 ... 266 °F)
Type K1E: -30 ... 200 °C (-22 ... 392 °F)
Degree of protection : IP 66 acc. EN 60529, IP 67 and IP 68 optional

Type K4L, K4E

Diameter range : 15 ... 100 mm
Dimensions : 43 x 18 x 22 mm
Material : K4L Stainless steel,
Type K4L: -30 ... 80 °C (-22 ... 176 °F)
Type K4N: -30 ... 130 °C (-22 ... 266 °F)
Type K4E: -30 ... 200 °C (-22 ... 392 °F)
Degree of protection : IP 66 acc. EN 60529, IP 67 and IP 68 optional

Other temperature ranges available on request

10 CE Declaration of Conformity

EU Declaration of Conformity (DoC)

We/Noi

Company name/Azienda:
Postal address/Indirizzo:
Postcode and City/Cap e Città:
Telephone number/Telefono:
E-Mail address:

ISOIL Industria spa
via f.lli Gracchi, 27
20092 Cinisello Balsamo (MI) - Italy
+39-02-660271
isomagservice@isoil.it

declare under our sole responsibility that the products listed below: /dichiariamo sotto la nostra responsabilità che i seguenti prodotti:

Product model/Modello:

Ultrasonic flowmeter/Misuratore di portata ad ultrasuoni: Isoflux IFX-F100, IFX-P200, IFX-P210 and associated trasducers/ e i trasduttori associati

are in conformity with the EEC directives /sono conformi alle seguenti direttive europee:

- (1) ElectroMagnetic Compatibility Directive (EMC) 2014/30/EU
- (2) Low Voltage Directive (LVD) 2014/35/EU

are in conformity with the following European Standards / sono conformi con i seguenti standard comunitari:

Class/Classe	Standard	Description/Descrizione
<u>EMC Directive</u>	BS EN 61326-1:2013	Electrical equipment for measurement, control and laboratory use - EMC requirements / Apparecchi elettrici di misura, controllo e laboratorio - Prescrizioni di compatibilità elettromagnetica
<u>Immunity / Immunità</u>	BS EN 61326-1:2013	Electrical equipment for continuous unattended use / Apparecchiature elettriche per solo uso continuo incustodito
	BS EN 61000-4-2:2009	Electrostatic discharge / Scariche elettrostatiche
	BS EN 61000-4-3:2006	RF field / Campo RF
	BS EN 61000-4-4:2012	Electric fast transient/burst / Transitori elettrici veloci / burst
	BS EN 61000-4-5:2014	Surge / Sovratensioni
	BS EN 61000-4-6:2014	RF conducted / RF condotta
	BS EN 61000-4-11:2004	AC mains voltage dips and interruption / Alimnetazione in c.a., cadute di tensione e interruzioni
<u>Emission/ Emissioni</u>	BS EN 61326-1:2013	Electrical equipment Class B / Apparecchiature elettriche Classe B
	BS EN 55022:2010	Disturbance voltage Class B / Grandezza di disturbo Classe B
<u>Low Voltage Directive / Direttiva bassa tensione</u>	BS EN 61010-1:2010	Safety requirements for electrical equipment for measurement, control and laboratory use / Requisiti di sicurezza per apparecchi elettrici di misura, controllo e per utilizzo in laboratorio

Signed for and on behalf of/Firmato in nome e per conto di:

15/06/2016



Dr. R. Guazzoni
Legal representative

ISOIL
INDUSTRIA

For EU Customers only - WEEE Marking.

Marking of electrical and electronic equipment in accordance with Directive 2012/19/EU



This symbol on the product indicates that it will not be treated as household waste. It must be handed over to the applicable take-back scheme for the recycling of electrical and electronic equipment. For more detailed information about the recycling of this product, please contact your local municipal office.

ISOIL INDUSTRIA S.p.A.

HEAD OFFICE	SERVICE
Via Fratelli Gracchi, 27 20092 Cinisello Balsamo (MI) Tel +39 02 66027.1 Fax 039 026123202 sales@isoil.it	isomagservice@isoil.it

If you want to find the complete list of our distributors access at the following link:

http://isoil.com/u_vendita.asp

BEFORE returning any material, please contact our SERVICE at the e-mail address:

isomagservice@isoil.com



Due to the constant technical development of its products, the manufacturer reserves the right to make changes and/or modify the information contained in this document without notice.